I. Installation Notice

1. Install water supply lines in accordance with this manual.
2. Floor drain should be installed in the location of the faucet.
3. Install the faucet only after the completion of house interior decoration in case paint or other chemicals erode the faucet surface.
4. Clean pipes to get rid of mud, sand or other debris blocked in pipes.
5. Wrap the thread part with Teflon tape before it is screwed. To avoid damage to the faucet, use a piece of cloth as a pad between the wrench mouth and the faucet. (Check whether the threads can be matched. Otherwise, too strong force applied to the wrench will damage the faucet).
6. After installation, check all the joints to make sure they are firmly connected. Then keep water flow. Turn on and off repeatedly to ensure there is no leakage around the joints. At this stage, the product is ready for normal use.
7. Keep the manual to the user.

II. Operation Notice

1. The product is for use between water pressure 0.05 ~ 1.0 MPa, water temperature 0 ~ 90°C.
2. Do not hang heavy things on the faucet.
3. Make sure the faucet is off when no water comes out of it (especially when nobody resides in the house or during the period of decoration or the absence of water).
4. Regularly clean the surface of the faucet in neutral wash solution. Then dry it with a piece of soft cotton cloth to keep it bright.
5. When room temperature drops to below 0°C,take necessary measures (such measures as keeping faucet warm and closing windows) to prevent the faucet from being frozen or even broken (especially when windows kept open for air ventilation while nobody resides in).
6. First turn on cold water, then hot water. To avoid scalding, regulate the water temperature before washing or showering and do not touch the faucet of the hot water part.
7. Do not disassemble the product unless you are an expert.

■ Installing steps

1. As specified in Diagram I, drill four holes on the floor in accordance with the inlet base. Insert anchors through the inlet base and fix them on the floor.
2. Install cold and hot supply lines on the floor and connect to the inlet base. (Attention: hot supply from the front, cold supply from the back.)
3. Insert the plug into the inlet base and tighten it by the flange. Turn on the water supply. Keep pressure for two hours. Check connections to make sure there is no leakage occurrence. Attention: As the product is a built-in valve, before ceramic tiles are stuck on the wall, keep water flow to test t he endurance of water pressure in case leakage occurs.
4. Remove the flange and the plug.
5. Put on the plastic protective sheath and install tiles on the floor. (Attention: Tiles should be kept the same height as or a bit higher than the top of the inlet base.)
6. As specified in Diagram II, place the escutcheon onto the faucet body with care. Special care is paid to the exterior of the faucet body.
7. Remove the plastic protective sheath from the inlet base and the inner supply tube. Slide the flange through the inner supply tube and fix it on the faucet body with the hex socket screw. Insert the inner supply tube into the inlet base and connect the inlet base and the flange with the hex socket screw. Tighten them with the hex wrench.
8. Place the escutcheon onto the floor.
9. Connect the shower holder to the showerhead joint and tighten them with the setscrew. (Attention: M5 screw on the faucet body faces the holes in the shower holder.)
10. Connect the showerhead and the shower holder with the hose. Turn on the water for inspection.

■ Installation diagram

Diagram I


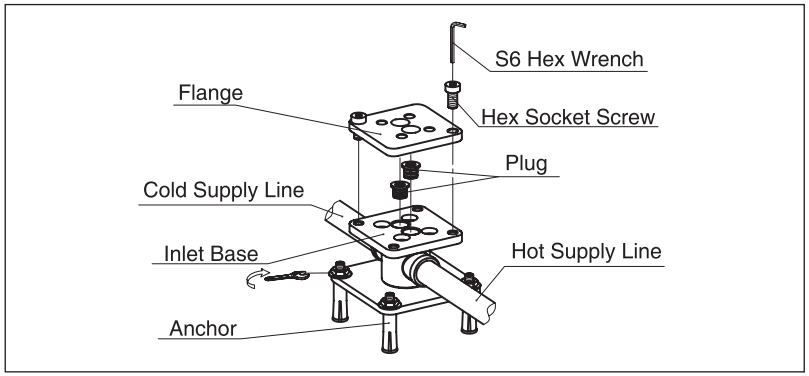


Diagram II

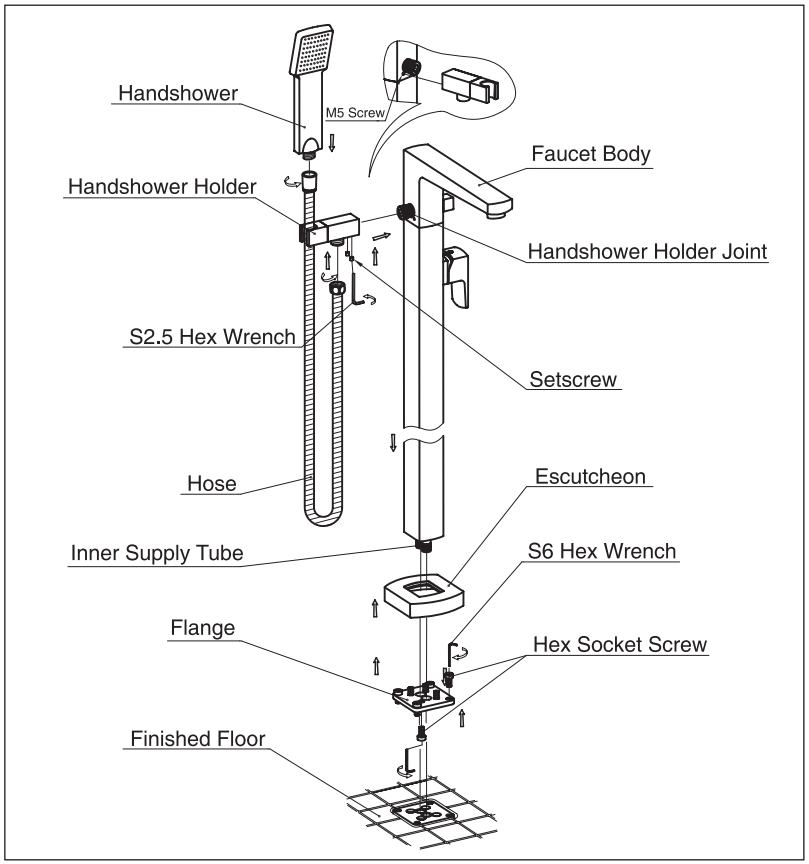

* This installation diagram is only for reference and subject to the real objects.

BS0129.ZX